
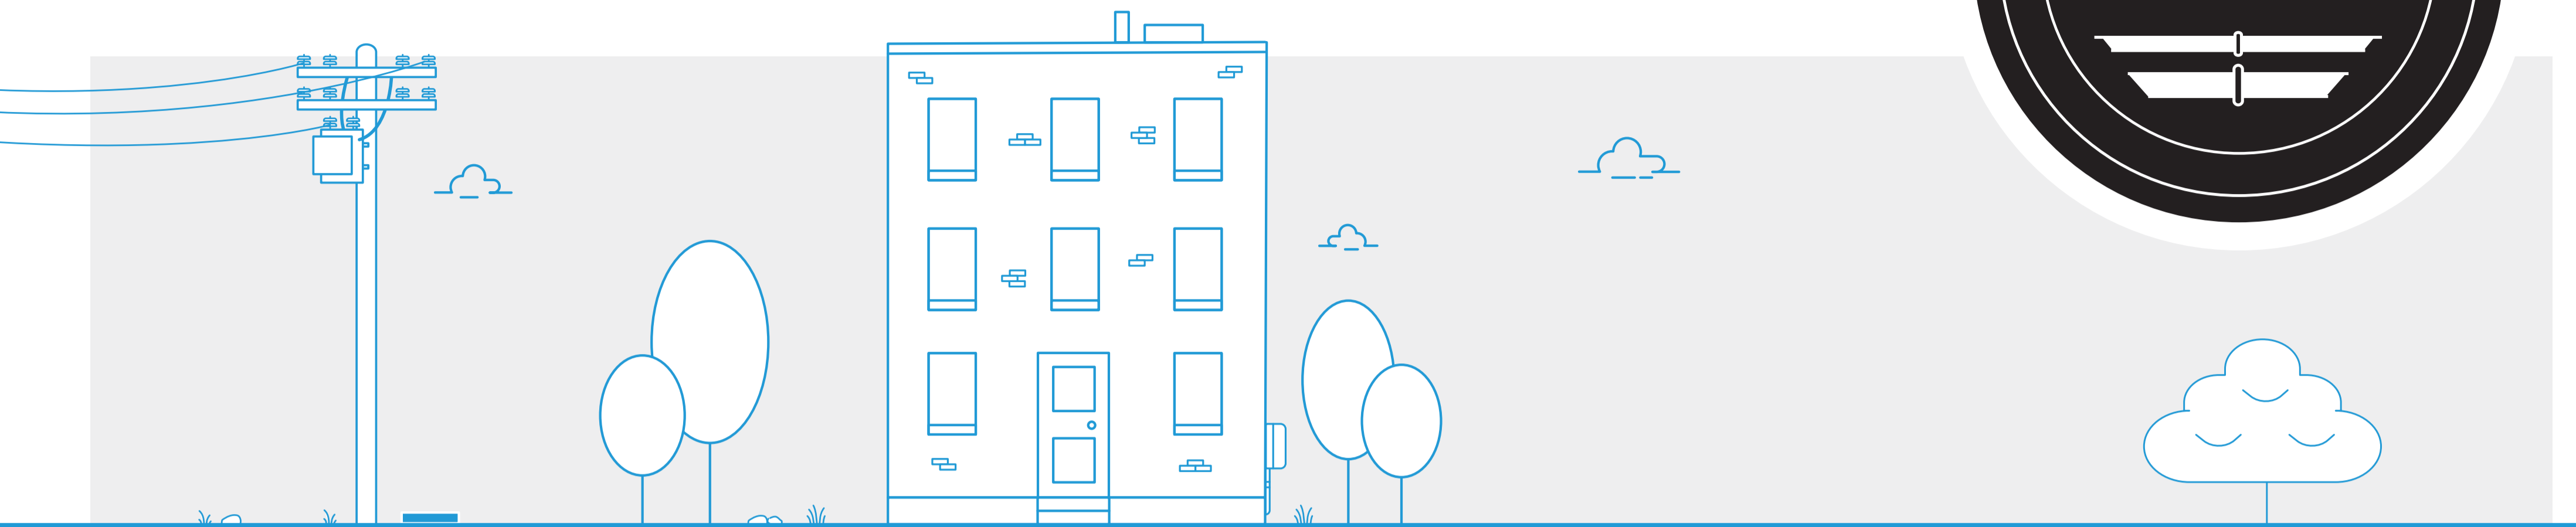


# Live Services

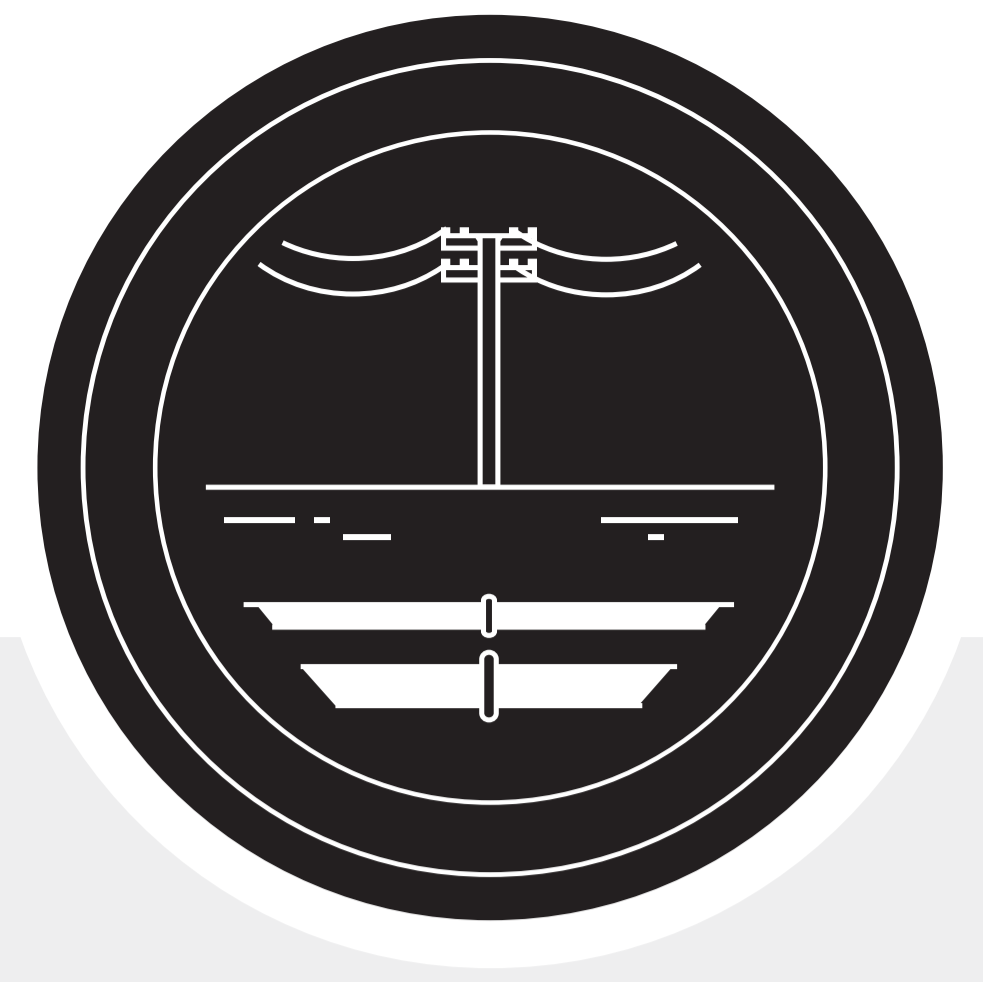

## Risk - Contacting live services

### Eliminate

If possible relocate existing services or have the relevant authority de-energise the service


### Minimise

If not eliminated, I will apply the below controls as a minimum:


#### Striking underground services



Services are positively identified using non-destructive methods

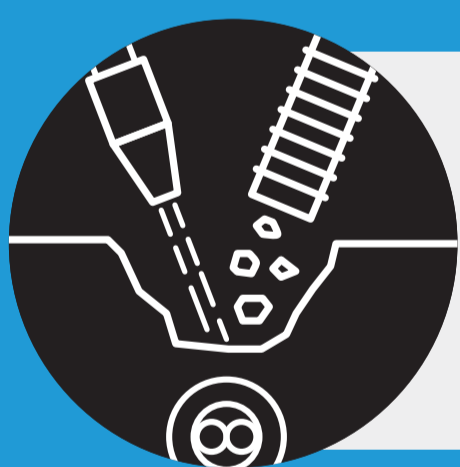

Only non-destructive excavation within 500mm of services

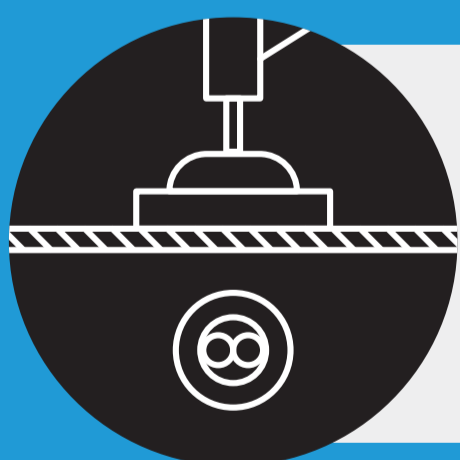

Engineered ground controls are used to protect services



Approved Permit to Excavate must be in place

#### Aboveground services



Do not enter No Go Zones



Overhead power lines have physical warnings



Approved Overhead Services Permit must be in place



All services (temporary or permanent) are identified

#### Concealed services



Approved Permit to Penetrate is in place



Identify all energised areas

#### Our Risk Standards

Any questions or feedback? Reach out to our team on site.